

IX.7.1B-SYSTEM-TRCARY SUBROUTINE TRCARY

Description

Subroutine TRCARY transfers rainfall-runoff and snow model state variables (carryover) from Operational Forecast System Forecast Component Data Base [Hyperlink].

Calling Sequence

```
call trcary (id,mfx,mpv,fx,pv)
```

Argument List

<u>Argument</u>	<u>Input/ Output</u>	<u>Type</u>	<u>Dimension</u>	<u>Description</u>
id	Input	C*8	1	Identifier
mfx	Input	I*4	1	Number of words in array fx
mpv	Input	I*4	1	Number of words in array pv
fx	Input	R*4	mfx	Array containing ffg parameters for an area
pv	Input	R*4	mpv	Array containing state variables